PARTS LIST MODEL: FV-7-6M

EXPLODED VIEW

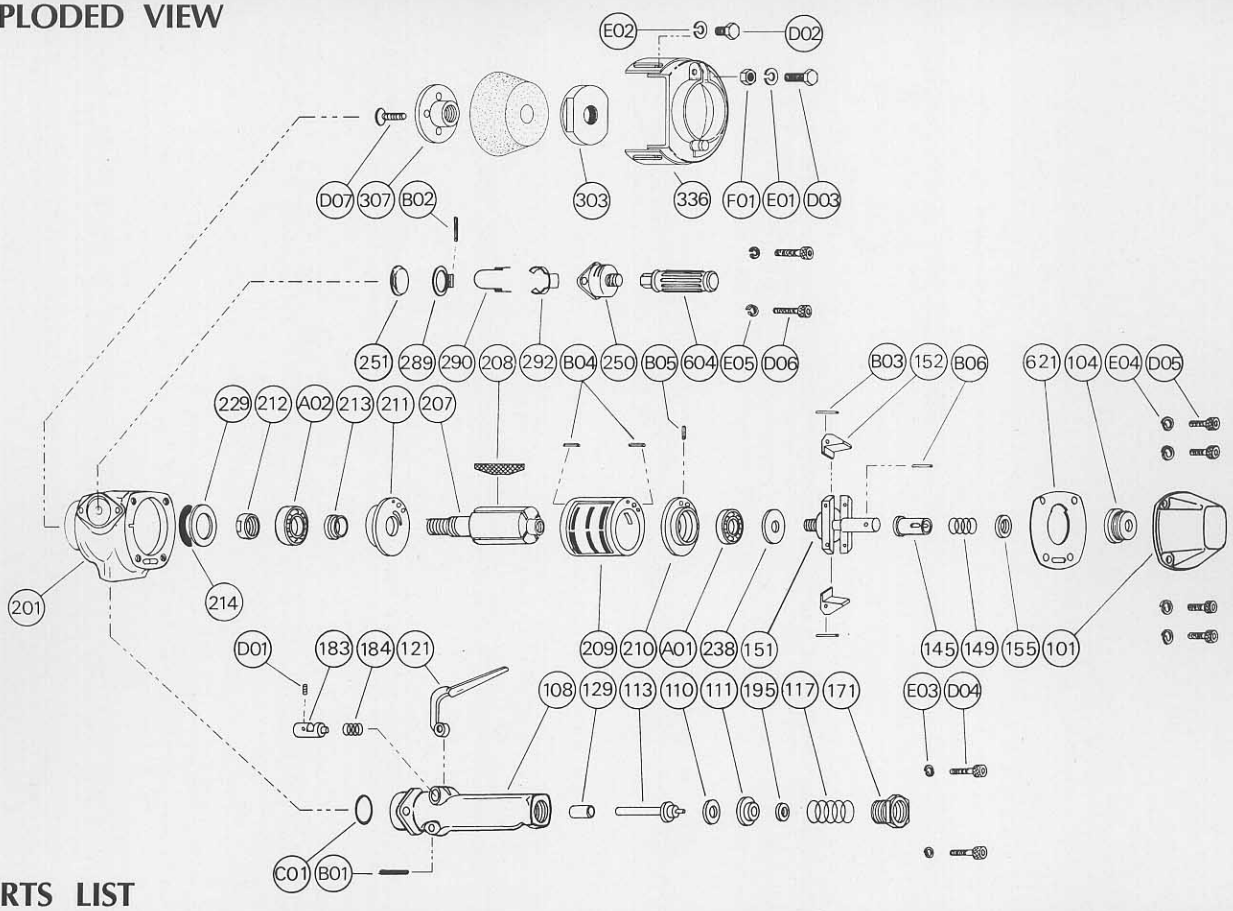

PARTS LIST

Index No.	Parts No.	Parts Name	Qt.
	LEVER HANDLE PARTS		
CP No.	**A-094003-00**	**Throttle Valve Body CP**	
108	A-094003-50	Throttle Valve Body	1
(129)	A-078129-00	Throttle Valve Rod Bushing	1
117	A-078117-01	Throttle Valve Spring	1
121	A-078121-00	Throttle Valve Lever	1
171	IB-6N30S0	Inlet Bushing 〈PT〉	1
171	IB-6N3NS0	Inlet Bushing 〈NPT〉	1
183	A-078183-01	Lock Key	1
184	A-078184-00	Lock Spring	1
B01	GP-520GCH	Grooved Pin	1
D01	SS-48	Set Screw	1
CP No.	**A-078008-00**	**Throttle Valve Rod CP**	
110	A-078110-01	Throttle Valve	1
111	A-078111-01	Throttle Valve Washer	1
113	A-078113-01	Throttle Valve Rod	1
195	W-080195-00	Sub Throttle Valve	1
CP No.	**A-094012-01**	**Exhaust Cover CP**	
250	A-094250-00	Exhaust Cover	1
251	A-094251-00	Exhaust Valve	1
289	A-094289-00	Muffler Plate	1
290	A-094290-04	Muffler Spring	1
292	A-094292-00	Muffler Plate Holder	1
B02	SP-325	Spring Pin	1

Index No.	Parts No.	Parts Name	Qt.
CP No.	**A-193010-01**	**Governor Weight CP**	
151	A-193151-00	Governor Cage	1
152	G-088152-00	Governor Weight	2
B03	GP-2.524GCH	Grooved Pin	2
101	A-094101-00	Housing Cover	1
104	A-078104-00	Bushing	1
145	A-077145-00	Governor Valve	1
149	A-077149-02	Governor Valve Spring	1
155	A-069155-00	Governor Valve Spring Holder	1
201	A-094201-00	Housing	1
207	A-094207-00	Rotor	1
208	A-094208-00	Rotor Blade	4
209	A-094209-00	Cylinder	1
(B04)	SP-48	Spring Pin	2
210	A-094210-00	Cylinder Upper Plate	1
(B05)	SP-38	Spring Pin	1
211	A-094211-00	Cylinder Lower Plate	1
212	A-094212-00	Rotor Nut	1
213	A-094213-00	Adjusting Collar	1
214	A-069214-00	Adjusting Washer 〈T=0.2〉	1
214	A-069214-01	Adjusting Washer 〈T=0.3〉	1
214	A-069214-02	Adjusting Washer 〈T=0.5〉	1
214	A-094214-01	Adjusting Washer 〈T=0.20〉	1
214	A-094214-02	Adjusting Washer 〈T=0.25〉	1

Index No.	Parts No.	Parts Name	Qt.
214	A-094214-03	Adjusting Washer 〈T=0.30〉	1
229	A-094229-00	Bearing Spacer	1
238	A-109238-00	Bearing Cover 〈B〉	1
303	A-150303-00	Wheel Flange 〈A〉	1
307	A-150307-00	Cup Wheel Holder Flange	1
336	A-061336-00	Cup Wheel Guard	1
D02	HS-612	Hexagon Bolt	4
D03	HS-625	Hexagon Bolt	1
E01	SW-6	Spring Washer	1
E02	SW-6	Spring Washer	4
F01	N-6	Nut	1
604	A-025604-02	Dead Handle	1
621	A-094621-00	Packing 〈A〉	1
A01	BB-6202MN	Ball Bearing	1
A02	BB-6303	Ball Bearing	1
B06	NR-2.515.8	Needle Roller	1
C01	O-S34	"O" Ring	1
D04	CS-620	Cap Screw	2
D05	CS-520	Cap Screw	4
D06	CS-618	Cap Screw	2
D07	CS-635	Cap Screw	1
E03	SW-6	Spring Washer	2
E04	SW-5	Spring Washer	4
E05	SW-6	Spring Washer	2

☐ CP No. denotes the assembled parts comprising of more than 1 pc. of parts.
The related parts are shown in the thick frame.

☐ #108, 209, 210 and 336 are supplied together with parts shown in ( ).

☐ Specify parts number and quantity in ordering.

■ Standard Accessories : F-705 Hex. Pin Wrench 1.
JS-41 Open-End Wrench 1.
F-202 Open-End Pin Wrench 1.

● Optional Accessories : HN-304000 Hose Nipple 1.

MANUFACTURER:
FUJI AIR TOOLS CO., LTD.
1-14, Kamiji 2-chome, Higashinari-ku, Osaka 537, Japan
Tel. : (06) 972-2335 (Overseas Dept) Fax : (06) 972-2250

PRINTED IN JAPAN
A-509412A